


CTA DIGITAL

PAD-SCGS

Compact Security Gooseneck Floor Stand for 7-13 inch Tablets INSTRUCTION MANUAL


Thank you for choosing CTA Digital's product. We hope that you will enjoy using it. Please follow the guidelines and instructions as laid out in this instruction manual.

Package Contents:

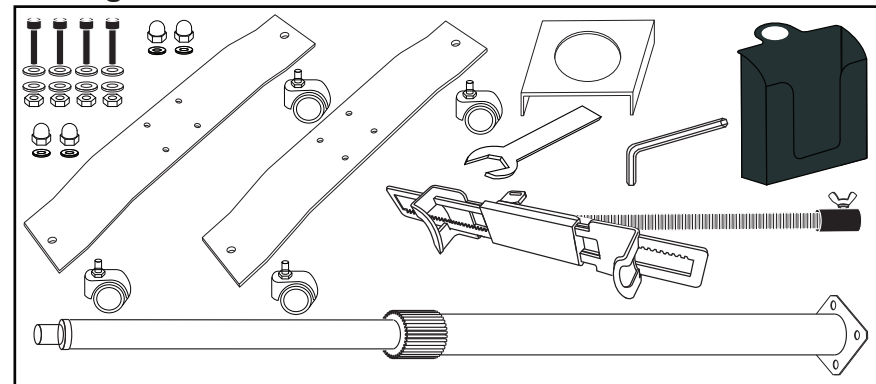

Instructions:

1. Attaching Foam Pad to Tablet Holder

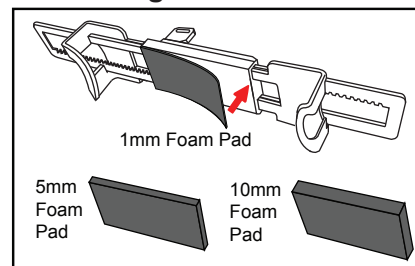

Select the appropriate foam pad according to the thickness of your tablet (or tablet in its case), then press adhesive side into center of the tablet holder.


Use this table to determine the appropriate foam pad to use with your tablet.
Note: sizes refer to total tablet size with or without a case.

Foam Pad Thickness	Tablet Thickness:
1mm	0.67-1.06in / 17-27mm
5mm	0.51-0.91in / 13-23mm
10mm	0.31-0.71in / 8-18mm

Section 1

1. Insert key and set position to unlock. Remove key, then slide holder open.


2. Load tablet corner first into one end. Insert key and set to lock, then slide holder shut until secure. Remove key.

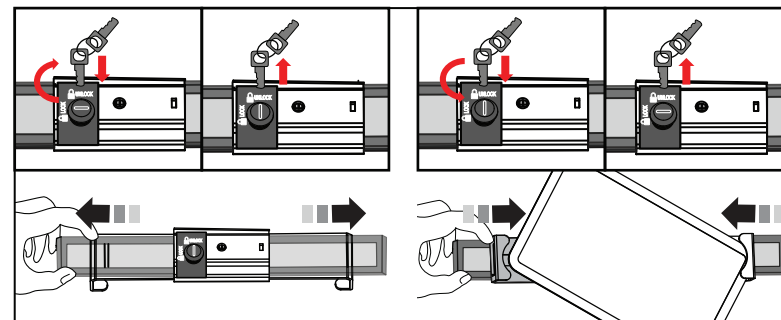


2. Installing the Wheels



Place a spring washer over the screw bolt on the wheel.

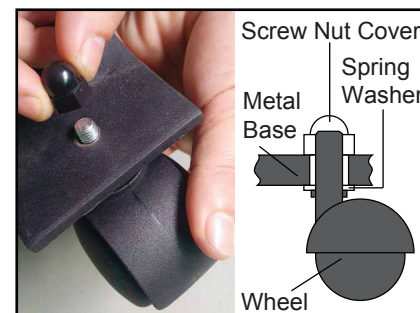

Place the screw bolt from each wheel through the metal base, then place a nut cover over the top of each. Screw down clockwise by hand, then use wrench to tighten further.

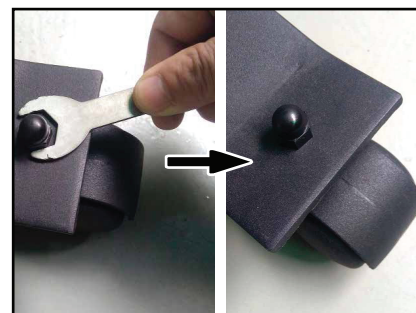

SUPPORT@CTADIGITAL.COM

3. Base Assembly and Connecting the Metal Cover:

METAL CONNECTION

HEIGHT
ADJUSTMENT
KNOB

POLE


Pole Assembly and Pole Nut
Cross Base Sections (2)

Allen Key

CONNECTION SCREW BOLT,
WASHERS AND NUT

METAL
CROSS BASE X 2

- 1) Place the metal base pieces with the higher piece on top of the cross base. Align the holes at the bottom of the pole with the holes on the cross base.
- 2) Insert a screw bolt with a washer into each of 4 holes. Place another washer on the underside of each screw bolts.
- 3) Grip the nut on the underside with one hand, and use the other to tighten each screw with the Allen key. Repeat to tighten all four screw bolts.

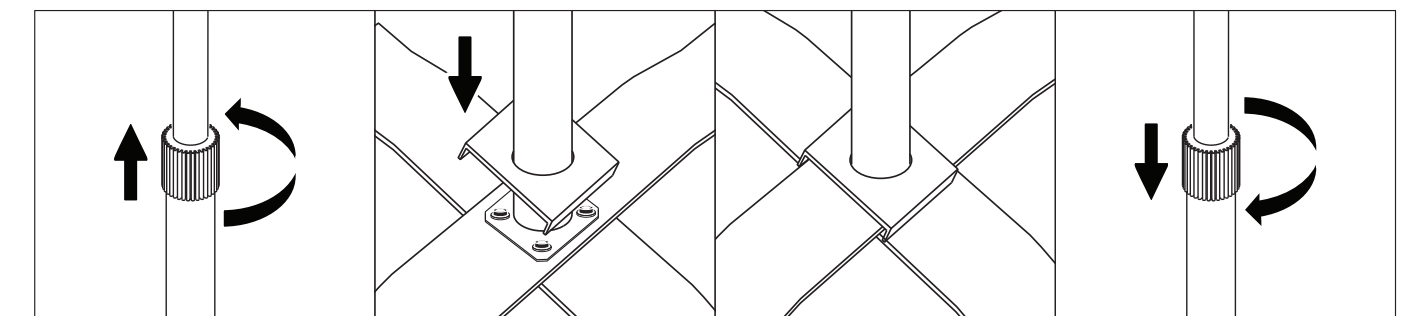


4. Rotate the grip counter clockwise to loosen completely and remove from top of pole.


5. Place the square metal cover over the top of the pole and slide down to stand base.

6. Place grip back over stand pole and tighten.


4. Connecting the Tablet gooseneck holder & Battery Case

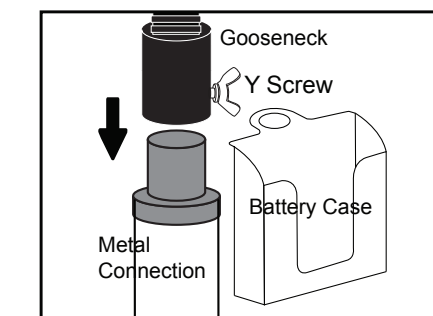

1. Place battery case over top of metal connection.
Note: if Y screw is already in, unscrew before attaching gooseneck.

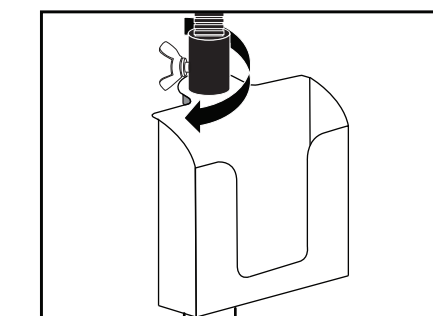


2. Screw the gooseneck onto the metal connection of the pole by turning clockwise. Be sure that the battery case is on the opposite side of the pole as the Y screw.

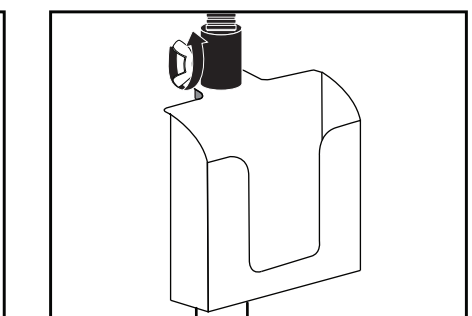


3. Turn the Y screw clockwise to tighten the connection.


5. Installing your Device and Adjusting the Floor Stand:

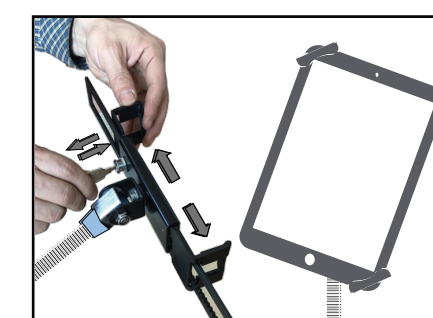

1. Refer to Section 1 to install your device and make sure you have held it securely.

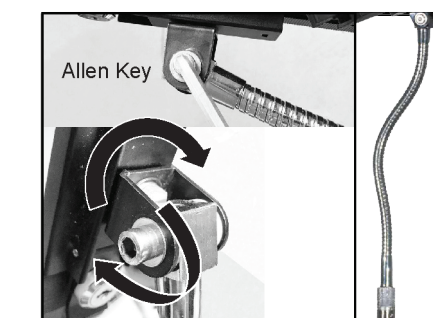

2. Tighten and loosen the gooseneck to holder connection screw to adjust ease of rotation.

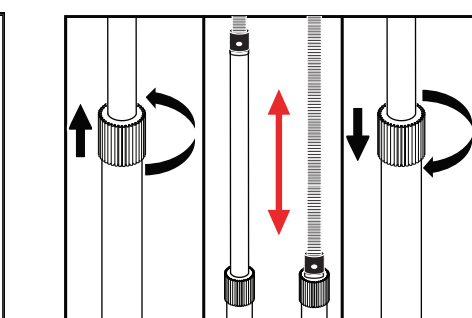

3. Rotate plastic grip counter clockwise to loosen, then adjust pole to desired height. Rotate plastic grip clockwise to tighten.

SUPPORT@CTADIGITAL.COM