 




logitech®


MK235

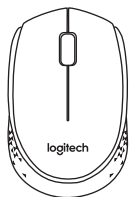


Setup Guide

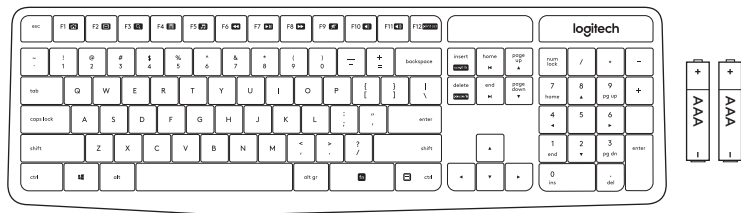


1

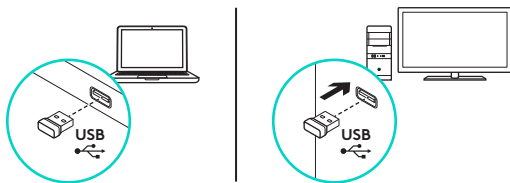


2

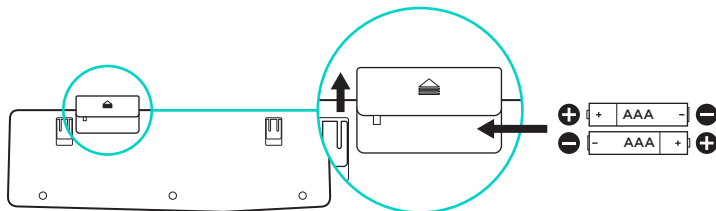

3

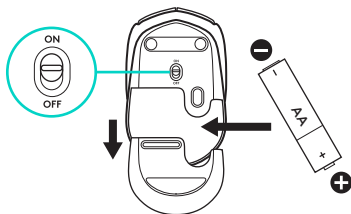

Keyboard features



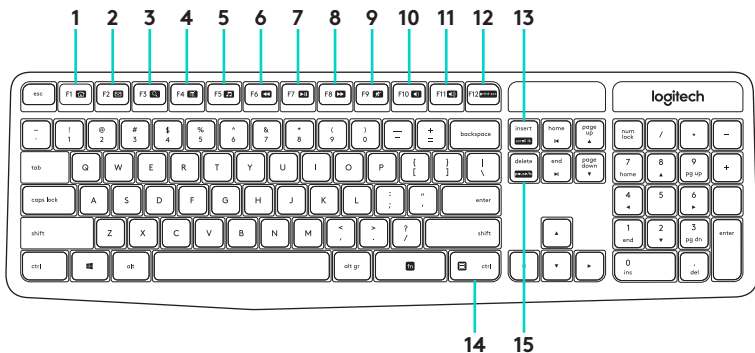


Hotkeys

Access the functions below by pressing Fn + the respective hotkey:

- | | | |
|-----------------|-----------------|------------------|
| 1. Internet | 6. Backward | 11. Volume up |
| 2. Email | 7. Play/Pause | 12. Print screen |
| 3. Search | 8. Forward | 13. Scroll lock |
| 4. Calculator | 9. Mute | 14. Pause/Break |
| 5. Music player | 10. Volume down | 15. Menu |

Mouse features

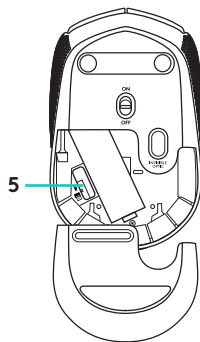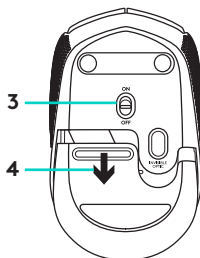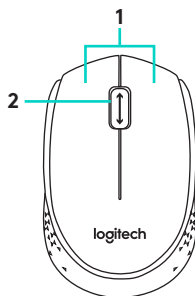

- 1. Left and right mouse buttons
- 2. Scroll wheel
Press the wheel down for middle button (function can vary by software application)

- 3. On/Off slider switch
- 4. Battery door release
- 5. USB Nano-receiver storage

Help with setup: keyboard and mouse are not working

- Check the orientation of the batteries inside the keyboard and mouse, or replace the batteries.
- Is the USB receiver securely plugged into a computer USB port? Try moving the USB receiver to a USB port closer to the keyboard and mouse.
- If the USB receiver is plugged into a USB hub, try plugging it directly into your computer.
- Remove any metal object between the receiver and the keyboard/mouse that may interfere with reception. Try using the mouse on a different surface.
- Restart the computer.
- If these suggestions don't work, download the Reconnection Utility from www.logitech.com/connect_utility.