



androidtv



INSTRUCTION MANUAL

SC-3250GTV



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

IMPORTANT

Please read this manual carefully before installing and operating the TV

Keep this manual handy for further reference

Content

- Safety Information** 1
- Important Safety Precautions** 2
- TV Buttons And Connections** 3
- External Device Connection Diagram** 3
- TV Install And Connect** 4
- TV Stand Installation Instructions** 4
- On Screen Display** 5
 - 1、Initial Setup 5
 - 2、Home 9
 - 3、Settings 10
 - 4、Tv Source Settings 12
 - 5、Google Play 13
- Help** 14
- Specifications** 15
- Remote Controller** 16

Safety Information



CAUTION / ATTENTION
RISK OF ELECTRIC SHOCK. DO NOT OPEN
RISQUE D'ELECTROCUTION. NE PAS OUVRIR.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.
TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.

CAUTION: TO PREVENT ELECTRIC SHOCK. DO NOT USE THIS POLARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

WARNING: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance with the FCC Rules could void the user's authority to operate this equipment.

FCC Declaration or Conformity Compliance statement (Part 15):

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The party responsible for compliance to these rules is:

Supersoinc Inc
6555 Bandini Blvd, Commerce, CA 90040, CA 90015
Ph:323-201-5060

Important Safety Precautions

- 1) Read these instructions. 2) Keep these instructions. 3) Heed all warnings. 4) Follow all instructions.
- 5) Do not use this apparatus near water. 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at Plugs, convenience receptacles, and the point where they exit from the apparatus.

11) Only use attachments /accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used caution when moving the cart/apparatus combination to avoid injury tip-over.



13) Unplug this apparatus during lightning storms or when unused for long periods of time.

Caution:

- 14) To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- 15) The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- 16) The AC receptacle shall be installed near the equipment and shall be easily accessible.
- 17) This product should never be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacture's instructions have been adhered to.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquid, such as vases, shall be placed on the apparatus.
- 19) Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).
- 20) Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.

21)  Never place the TV, remote control or batteries near open flames or other heat sources, including direct sunlight. To prevent the spread of fire, keep candles or other flames away from the TV, remote control and batteries at all times.

22) The USB terminal should be loaded with 0.5 A under normal operation.

To reduce the risk of electric shock do not perform any servicing.

23)  This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

 
24) This apparatus should not be used at temperatures exceeding 113 degrees.

TV Buttons And Connections

TV Buttons

Note: The following is only functional schematic, And the actual position and arrangement of different models may be different.

One key:

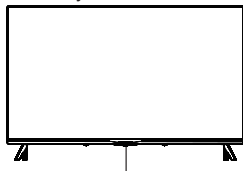

Press this button in standby mode to turn on / off the TV.

Seven keys:

	Turn ON/OFF Power.
SOURCE /	External Signal Input Selection.
MENU / OK	Display Main MENU And Confirm MENU Item Selection.
CH+/-	Selecting Channel.
VOL+/-	Adjusting Volume.

Connections


Note: The following are the various connections available. The position and arrangement of connections differ by model.

	AV input External AV Signal Input		ANT 75 Connect the antenna/cable TV input. (75V/HF/UHF)
	RJ45 Connect the Internet.		USB input Connect a USB device here to play its media files or to record programs via the PVR function.
	HDMI input Digital signal input from HDMI video connector.		OPTICAL output Connect the SPDIF receiver.




*Please discontinue use of any device using the USB mode before connecting, disconnecting or adjusting the HDMI or USB terminal ports.
Failure to do so can result in an electrostatic discharge that could cause damage to the TV and/or its operation.

 External device connection diagram

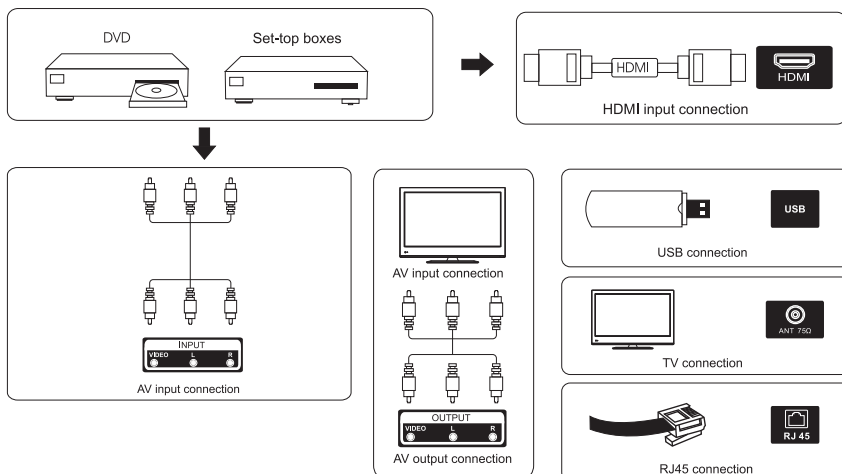

TV Install And Connect

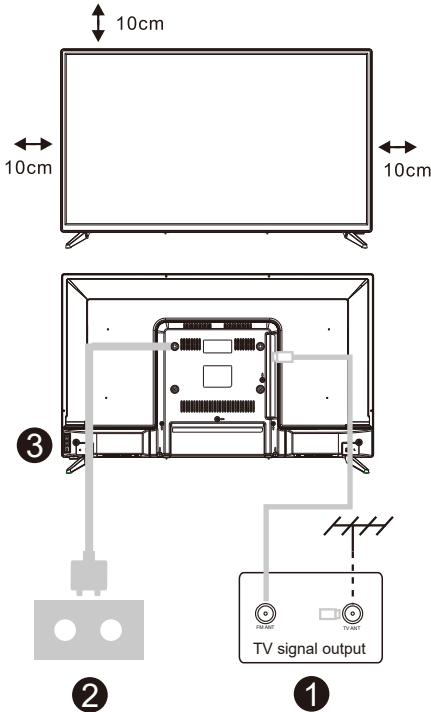 

Setup your TV

1. Put your TV in a place that can support the weight of the TV.

To avoid danger, please do not assemble the TV near water or extreme heat (such as a furnace, light source, or candle.)

Do not block the ventilation on the back of the TV.

Connect signal source and power

2. Connect the antenna cable to the RF connection on the back or side of the TV, and/or the signal source HDMI cable to the HDMI input(s) on the rear or side of TV. Plug the TV into the wall power outlet (AC 100-240V~ 50/60Hz).

Turn on the TV

3. Connect the power supply, enter the standby mode (red light), press the power button of the TV or the power button on the remote control to turn on the TV.

Note:

Picture for reference purposes only.

VESA SIZE: M6*8mm 100*100mm

TV Stand Installation Instructions

Stand Installation Guide

The TV is packaged with the TV stand separated from the cabinet. To setup the TV table stand, please carry out the installation according to the instructions below.

1. The panel can be scratched easily, so please:

 
Place a soft cloth on the table and place the TV face down on the cloth.

Note: Always unplug the AC cord first when installing/removing the stand.


2. Take the base. Please align the screw holes of the base and the TV, and then insert the screws into the holes on the base and tighten them.

Note: To ensure that the TV is stable, please tighten all screws.

The stand of some TV models is designed with snap-in type, easily installed by snapping into stand groove, instead of screw.

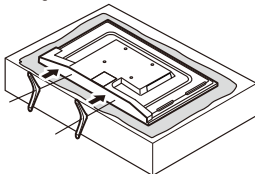

Please take note of the base direction:

 


The bottom view of the TV
(Front cabinet faces down)

(The illustration is for reference only)

Suggestion:

 To make it more convenient for base installation and to avoid any risk of scratches and damage, we advise using the type of PH2 screwdriver.

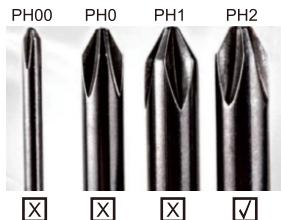

Initial Setup

1.Initial Setup

For the first initial setup, on-screen setup wizard will guide you through setting up your TV. Please follow the guide to setup your TV correctly.

Language select

Use $\wedge/\vee$ buttons to select system language, then press **【OK】** to confirm.

 
Quickly set up your TV with your Android™ phone? (Continue/skip)

To connect your Android Smartphone to your TV, Select **“Continue”**.

1. On your Android Phone, open the Pre-installed app “Google”.
2. Type or say, “Ok Google, set up my device”.
3. Tap the model name on the list.

Note: Press **“BACK”** to cancel

If you just want to use your TV normally, please select **“Skip”**

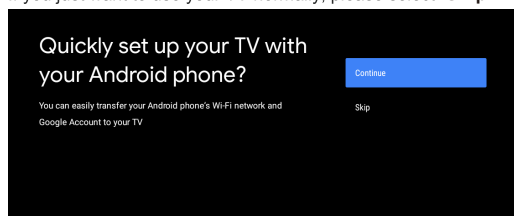

Configure the network

Press $\wedge/\vee$ buttons to select Wi-Fi you wish to connect to, enter the password and then confirm to connect.

If you select **“Skip”**, it could be performed in homepage or settings menu.

Google Account Sign in

Sign in to get new apps, recommendations, movies, and more from Google.

Initial Setup

 
1.Initial Setup(Cont.)

Use your remote:

Use the remote to enter your Google Account and password to sign in to your Google Account.


Terms of Service

By accepting the Google Terms of Service to improve the product experience, Select **"Accept"** to proceed with this condition.

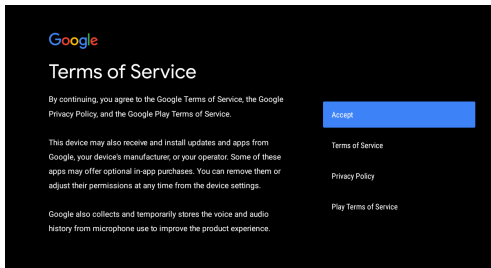

Google Services

 Select **"Accept"** to confirm if you want your location identified on your Android TV and agree to automatically send diagnostic information to Google to help improve your Google experience.

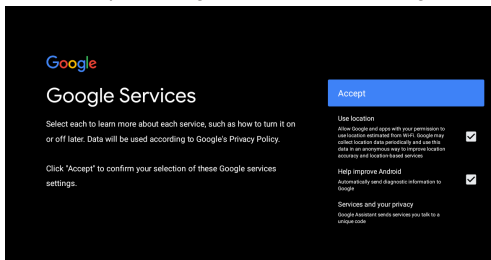


Play Auto Installs


Select install or un-install the recommended apps and Google apps by using this process.

Select **"Continue"** to the next page.

 Initial Setup

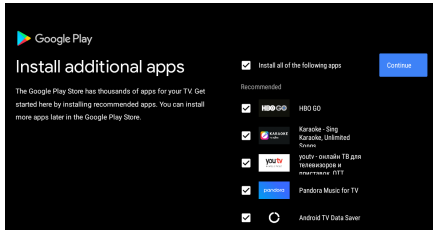


 Informational screens will not appear, you can scroll through steps by pressing the “RIGHT” navigation button to continue.

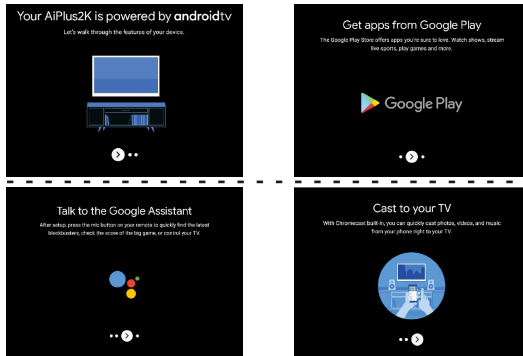


Pairing Bluetooth Remote

 1. Press 'BACK' and 'VOL-' simultaneously on remote control to enter the Bluetooth pairing mode. The Indicator light on remote control will flash when starting the pairing mode.
2. Press 'BACK' button to skip the pairing mode.

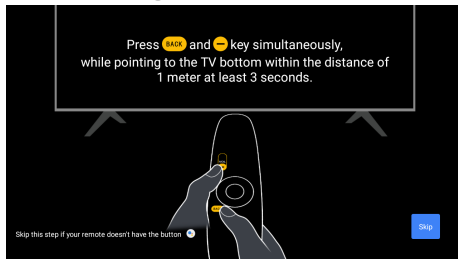

Select Text to Speech

 Press ^/v buttons to select voice guide at a speed of your preference, then press 【OK】 to confirm.

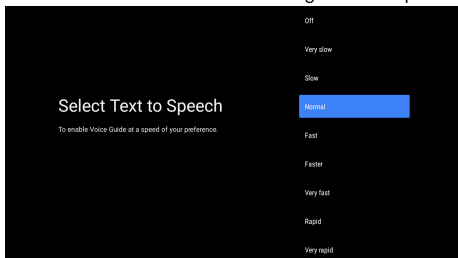

Initial Setup

1.Initial Setup(Cont.)

Select Region/Country

Select the country you are using the device in with the $\wedge/\vee$ directional buttons, then press **【OK】** to confirm.

Select Time Zone

Press $\wedge/\vee$ directional buttons to select Time Zone, then press **【OK】** to confirm.

Select TV mode

This unit has been preset to **"STORE"** brightness, to reduce brightness and energy consumption, change to **"HOME"** setting to qualify under ENERGY STAR.

 
 
Chromecast built-in™

Select On/Off to make Chromecast built-in available.



TV Channel Setting

Select Antenna/Cable to scan TV channel.

If you select **"Skip"**, the channel scan could be performed in menu.

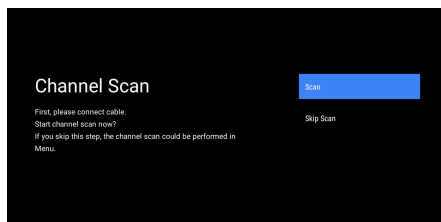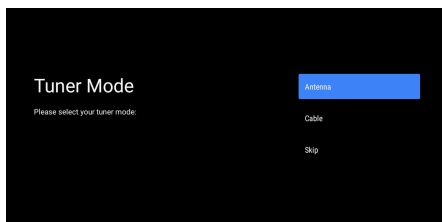


Setup completed and Disclaimer Terms

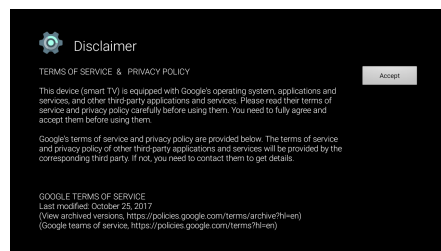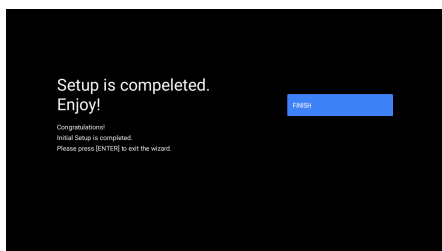  

Home

2. Home

 Once you have completed the initial setup, you will now enter the home screen or press  button to display the homepage.

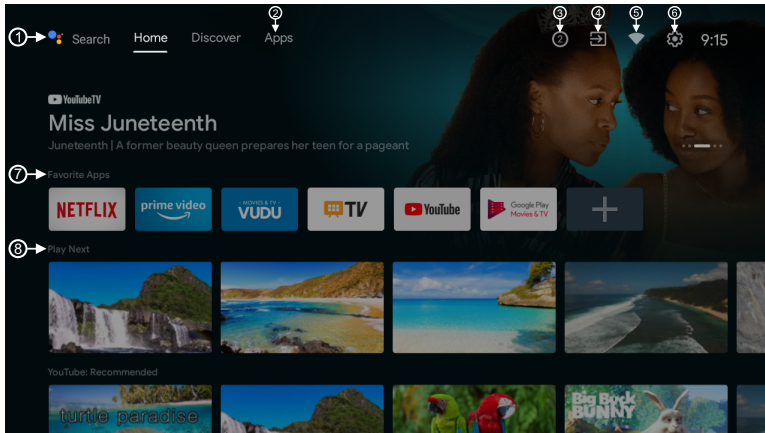

① Google Assistant

Use your voice to jump to shows, control devices, and more – just ask Google.

② Apps

Select “**Apps**” to have access to all your applications. Pre-installed applications are available for you in this row, select “**Google Play**”, if you wish to search and download additional apps.

③ Notifications

Here will display all notifications relating to anything on your Android TV.

④ Inputs

Select this if you want to adjust your TV Input, Example: TV, HDMI 1, HDMI 2.

⑤ Network

It will display what network connectivity, Wi-Fi or Ethernet.

⑥ Settings

Manage apps and TV controls, change preferences, sounds, and your Google account information.

⑦ Favorite Apps

Quick access to frequently used apps. You can create your favorite list.

⑧ Play Next

 
Each row past this point will display recommended content from the apps you already have installed.

Settings

3. Settings

Allows you to set various preferences of your TV

1. Press $\triangleleft/\triangleright$ buttons to select "Settings" which is in the upper right corner of the screen.
2. Press $\wedge/\vee$ buttons to select the option which you want to adjust in the Settings menu.
3. Press **【OK】** to enter.

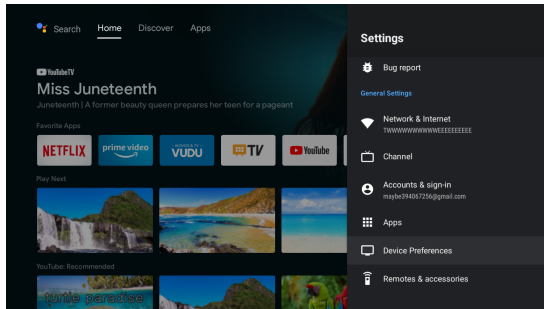

Network & Internet

 
Adjust all network settings and check connection if you have connection problems.

1. Press $\wedge/\vee$ buttons to select "Network & Internet" in the settings menu.
2. Press $\wedge/\vee$ buttons to select: Wi-Fi/Add new network/Scanning always available/Proxy settings/IP settings.

Channel

Display the scan sub-menu based on different channel installation modes.


1. Press $\wedge/\vee$ buttons to select "Channel Source" & Channel installation Mode & Parent Control.
2. Press **【OK】** to enter "Parental Controls", then press $\wedge/\vee$ buttons or use the number buttons on remote control to enter the default password "**1234**".
3. Press $\wedge/\vee$ buttons to select Channels Blocked, Program Restrictions, Inputs Blocked and Change PIN.

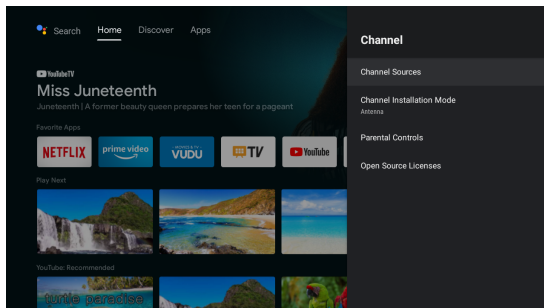

Settings


Device Preferences

 1. Press $\wedge/\vee$ buttons to select the options of About, Date & Time, Timer, Language, Inputs, Picture, Sound, Google Assistant, Reboot and others.
2. Press **【OK】** to jump to the corresponding sub-option.

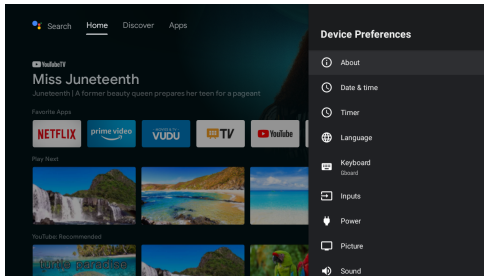


About

 1. Press $\wedge/\vee$ buttons to check additional information such as System update, Device name, Factory reset, Status, and more.
2. Press **BACK** button to return to the previous menu.
Press **EXIT** button to exit the menu.

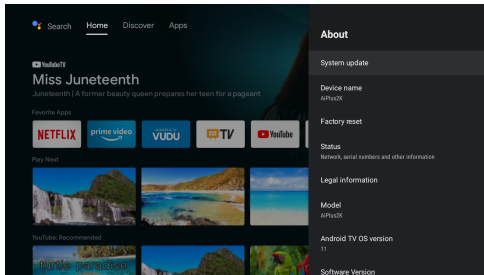

Factory reset

 If factory reset is selected, it will erase all data from your device's internal storage, including: your Google Account, system and app data and settings, and downloaded apps.

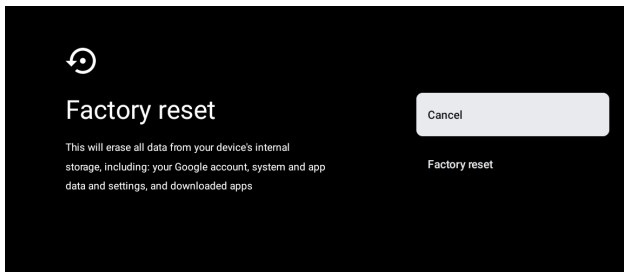


Tv Source Settings

4 Tv Source Settings

To enter TV source in Homepage:

 1. Press  button or Select "Live TV" on Homepage.

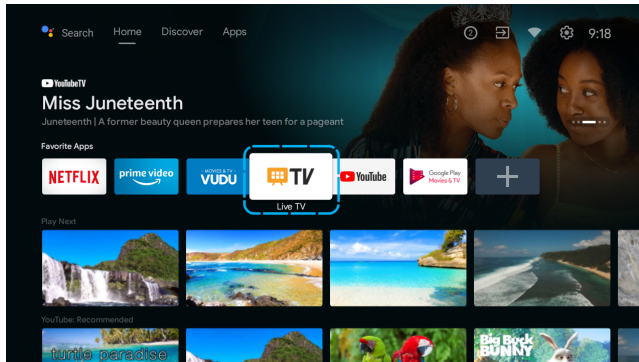


2. Press  button, then select "Channels" and select "New Channels Available" to enter.


Google Play

5 Google Play

 
To have access and to download applications from the Google Play ,you must sign in with a Google Account.

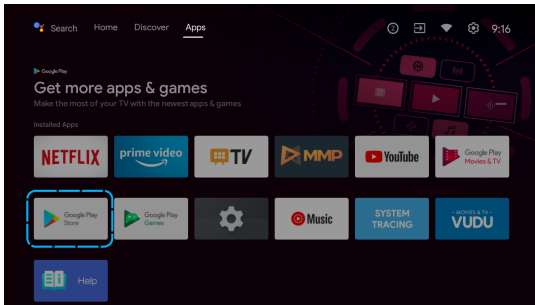

 Once you open Google Play , you will be prompted to sign in or create a new account.

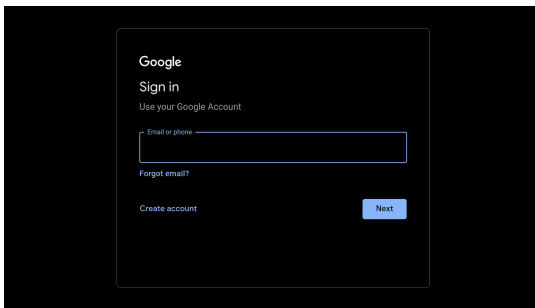

 Once you have signed in, the below page will be displayed, scroll through the list of applications available for download or go to the search button, and search via entering text or speaking to Google Assistant via your remote control.

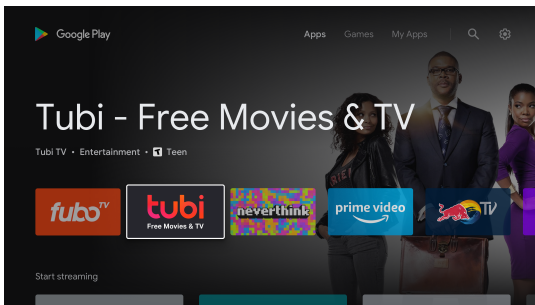

Help

No Power	Check to see if the AC cord of the television is properly plugged into the outlet. If there is still no power, remove the AC cord and replug after 60 seconds. Attempt to start the television again.
Not receiving signal properly	- A double image or ghost could be caused by obstructions of the external antenna. Consult the antenna instruction manual to change the direction of the external antenna. - Perhaps the location of the antenna is not good. Use of a taller antenna can improve the quality of the images. - If you use an antenna, reception may be difficult in some situations. You can attempt to adjust the antenna to improve the image.
No Picture	- Check to be sure the antenna at the back of the unit is connected properly. - Try to select other channels to be sure the issue is not with the channel. - Check for possible sources of interference.
Poor sound or no sound	- Increase the volume. - Check to be sure the unit is not in MUTE mode. Press the mute button to restore sound. - Try to select other channels to be sure the issue is not with the channel. - Check for possible sources of interference. - Check to be sure the antenna at the back of the unit is connected properly.
Poor color or no color	- Adjust the contrast and/or brightness of the TV. - Try to select other channels to be sure the issue is not with the channel. - Check to be sure the antenna at the back of the unit is connected properly.
Poor reception	Check to be sure the antenna at the back of the unit is properly connected.
Horizontal or diagonal lines on screen	- Unit could be experiencing interference from other appliances such as a hair dryer or vacuum. Discontinue the use of these other appliances to improve reception. - Check to be sure the antenna at the back of the unit is connected properly.
TV does not respond to the remote	- Point the remote directly to the sensor on the TV. If this does not work, be sure that the remote is in working order (batteries correctly installed, etc.)
No Video in PC mode	- Check if the cable is properly connected to the VGA input. - Check to be sure the display cable is not bent or damaged.
The screen is too dark or too light in PC mode	Adjust the contrast ratio or brightness in Main menu.
No response in PC mode	Check the computer setting for compatible display resolutions.
Lines in picture while using RCA connection	- Check if the cable is properly connected to the input. - Check to be sure the cable is not bent or damaged. - Use a correct RCA cable.
Problems still exist	Unplug the power cord and wait for 60 seconds, then reconnect. If problems remain with the unit, please do not attempt the repairs yourself. Contact the Customer Service center for assistance.

Specifications

Screen Size	power Consumption	Main accessories
24"	30W/36W	User's manual x1 Remote controller x1 Power cord x1 AAA Batteries x2 (Optional)
32"	40W/56W	
39"/40"	60W/70W/90W	
42"	65W/70W/90W	
43"	70W/80W/90W	
50"	100W/108W/120W	
55"	118W/135W	
65"	160W/165W/190W	

★ LIFE TIME : 60,000 Hrs

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

1. Using cabinets or stands recommended by the manufacturer of the television set.
2. Only use furniture that can safely support the television set.
3. Ensure the television set is not overhanging the edge of the supporting furniture.
4. Do not place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
5. Do not place the television set on cloth or other materials that may be located between the television set and supporting furniture.
6. Educate children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

Wall-mounted screw: 22-24inch M4, 28-70inch M6, 75inch M8

Note: don't hang at an angle to avoid the risk of falling off.

	Operation Frequency	Transmitting Power
WiFi	2400~2483.5	Less Than 100mW

Google, Google Play, YouTube, Android TV and Chromecast built-in are trademarks of Google LLC.

Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

This user manual for reference only

Remote control

6 Remote control

① Switches the TV between on and standby mode.

② Indicator light.

③ Mute or restore your TV sound.

④ Enter “-” for Sub-channel symbol. (Ex:11-1)

⑤ Displays the EPG Electronic Program Guide.

⑥ **INFO**:Displays the present channel information such as the current time and channel name.

⑦ **HOME**:Displays the home screen.

⑧ **Menu**:Displays the OSD (On Screen Display) menu.

⑨ **Inputs**:Display/Select signal source options.

⑩ **Navigation buttons**:Cursor UP/LEFT/RIGHT/DOWN.

⑪ **Back**:Press to move back through menus.

⑫ **Exit**:Exit the OSD menu.

⑬ **Google Assistant**:
Talk to Google to control your TV using your voice.

⑭ **YouTube**:
Connects to YouTube.(internet connection required)

⑮ **NETFLIX**:
Connects to NETFLIX for viewing online TV shows and films. (internet and NETFLIX account required)

⑯ **Google Play**:Connects to Google Play.

⑰ **Prime video**:Connects to Prime Video.
(internet and Prime Video account required)

⑱ **Media control**
Fast forward/back
Play the last/next program
Play/Pause/Stop program

⑲ **USB**:Open Multi Media Player.

⑳ **Audio**:Displays the Audio Language list and select an audio language or audio format if available. (only applicable when the TV program has this feature)

㉑ **CC**:Closed Caption.

